

WDMX Settings

Transmitter Adjustments

To Sync

Press and Hold **Red Button** 3-5 seconds to reset Transmitter
Press **Red Button** for 1-2 seconds and release to Sync

To Change Function

Press **Red Button** for 1-2 Seconds while Powering on Unit.
This will change from Transmitter to Receiver and Receiver to Transmitter.
Tx will light up on front for Transmitter
Rx will light up on front for Receiver

Receiver Adjustments

Follow Change Function Setting until in Rx Mode

Press and Hold **Red Button** 3-5 seconds to reset Receiver

Press *Go to Transmitter*
Red Button to Sync