

Show DMX Settings Transmitter Adjustments

Check or Change Show ID

From Home Screen

- Press **Enter** (Middle Button)
- Press **Up or Down** Until Display Reads **Show ID**
- Press **Enter**
- Press **Up or Down** To set Show ID (*We use 40 or 50 currently*)
- Press **Enter**

- Press **Left** To Exit to Home Screen

Check or Change Transmission Power

From Home Screen

- Press **Enter**
- Press **Up or Down** Until Display Reads **RF Settings**
- Press **Enter**
- Press **Up or Down** Until Display reads **Power**
- Press **Enter**
- Press **Up or Down** To set desired level (best to Increase to max output in crowded rooms)
- Press **Enter**

- Press **Left** Twice to exit to main menu

Show DMX Settings Receiver Adjustments

Check or Change Show ID

From Home Screen

- Press **Enter**
- Press **Up or Down** Until Display Reads **Show ID**
- Press **Enter**
- Press **Up or Down** To set Show ID (We use 40 or 50 currently)
- Press **Enter**

- Press **Left** To Exit to Home Screen

Check or Change Reception Power

From Home Screen

- Press **Enter**
- Press **Up or Down** Until Display Reads **RDM Settings**
- Press **Enter**
- Press **Up or Down** Until Display reads **Power**
- Press **Enter**
- Press **Up or Down** to set desired level (best to Increase to max reception in crowded rooms)
- Press **Enter**

- Press **Left** Twice to exit to main menu